

CO₂ to Air Temperature - OIL

Oil Burner Combustion Adjustment
Setting CO₂ relative to outside air temperature

